
Nafnti

AI Bird Feeder Quick Guide

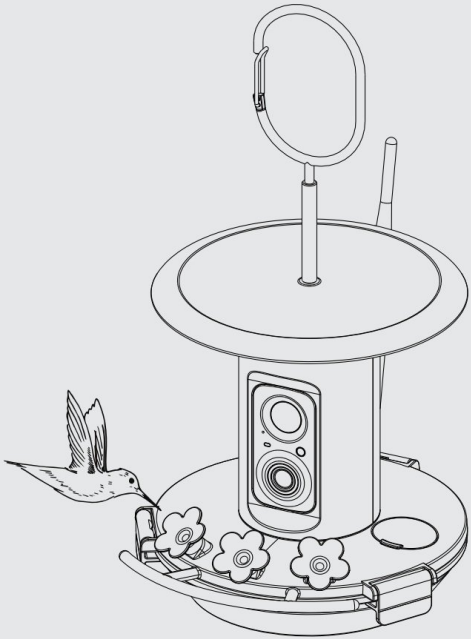

USER MANUAL



Installation issues or missing parts?
Find solutions at
www.nafntibird.com
→ Get answers in 1 minute

Warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

FCC (USA) 15.9 prohibition against eavesdropping except for the operations of law enforcement officers conducted under lawful authority, no person shall use, either directly or indirectly, a device operated pursuant to the provision of this part for the purpose of overhearing or recording the private conversations of

others unless such use is authorized by all of the parties engaging in the conversation. Changes or Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCCID: 2BVEK-V10-FNQ01

IC Caution:

- English:
  This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.


2. This device must accept any interference, including interference that may cause undesired operation of the device.

CE RED This product can be used across EU member states.

Catalog

1. What's In The Box	P. 1
2. Product Overview	P. 2-3
3. Battery Charging	P. 4
4. How to Turn On & Off the Camera	P. 5
5. Set up with O-kam Pro App	P. 6
6. Connection Camera--BT Mode	P. 7 -10
7. Device Sharing	P. 11
8. Fill the Nectar	P. 12-13
9.Read Before Installation	P.14
10. Assemble the Hummingbird Feeder	P.15-21
11. Special Reminder	P· 22-23
12. Clean the Hummingbird Feeder	P. 24 -26
13. Frequently Asked Questions	P. 27-30
14. How to Clean the Lens?	P· 30


What's in the Box

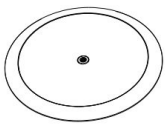

Solar Roof



Nectar Container



Camera



Hanging Hook




X 3

Feeding Port




Antenna

Clean Brush





Type-C Power Cable

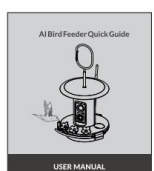


Quick Guide

Product Overview

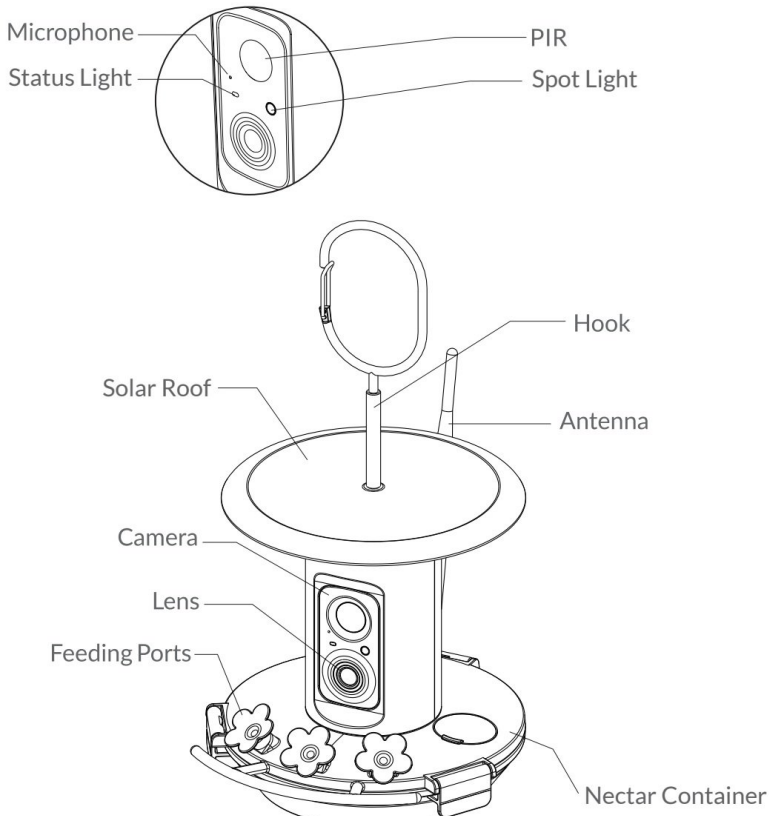


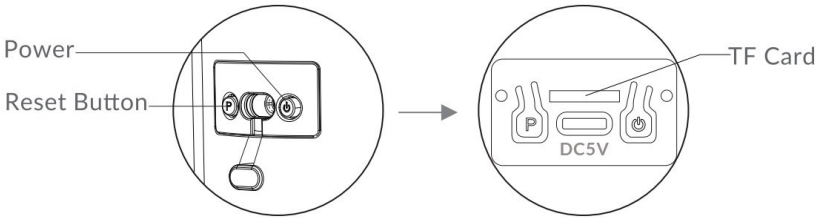

You can insert a TF card after opening the entire silicone cover.

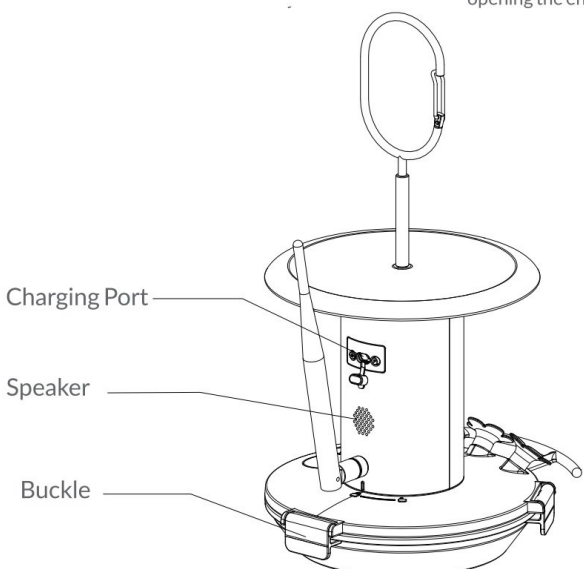

Battery Charging

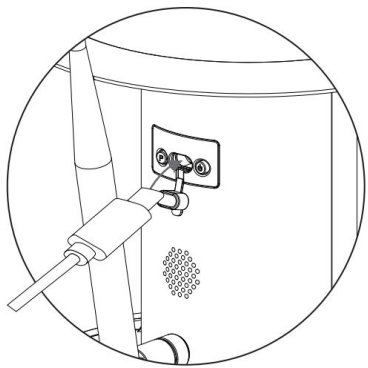


The batteries inside the camera are not fully charged according to the transportation safety regulations. Please fully charge the camera before using it.

Please charge the batteries with provided Type-C Port Cable (DC5V/1.5A adapter not included).

The status light turns red while charging and turns green when fully charged. It takes about 8 hours to fully charge your camera.

How to Turn On & Off the Camera

To turn on the camera:
Press and hold the power button for 3 seconds to turn on the camera.
On first startup, the camera enters ready-to-connect mode: the blue LED flashes, and you will hear "Please use the app for Wi-Fi configuration."
If the blue LED stays lit continuously, double-press the power button to reset and re-enter ready-to-connect mode.

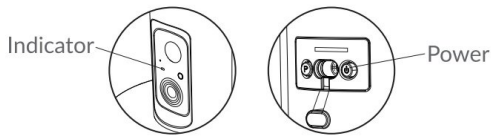

To turn off the camera:
Press and hold the power button for 5 seconds to turn off the camera.
Press the P button once to restart the camera and automatically restore the previous connection.
While the camera is on, double-press the power button. The camera will reset to factory settings and re-enter ready-to-connect mode.

Status Light

Indicator light	Device status
Blue light flashes slowly	Waiting for connection
	Connection failed
Blue light flashes quickly	Network connecting
Blue light always on	Network connection successfully
Blue and green light flashes slowly	Device unbinding
Solid Blue	Device is active
Solid Red	Charging (device not active)
Solid Green	Fully charged (device not active)
Solid Red + Blue (appears magenta)	Charging while device is active
Solid Blue + Green (appears cyan)	Fully charged while device is active


Set Up with O-kam Pro App

Download on the App Store

GET IT ON Google Play

Download O-kam Pro App from App Store or Google Play. You can also download the App by scanning the QR code above with the QR code scanner in your smartphone.

Connection Camera--BT Mode

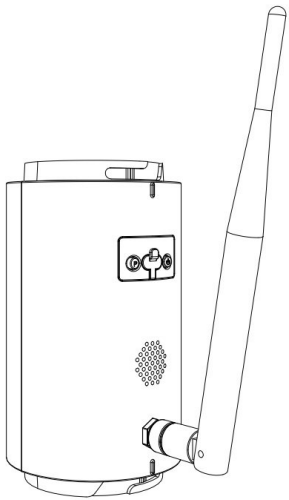


Install the antenna before connecting the camera. (Important)


1.First,Turn on the BT function of the phone.

2.Turn on your phone's location function.During this connection process,the APP will also pop up a prompt to enable location.Please do not decline this prompt under any circumstances;Otherwise,BT devices will not be detectable.(Extremely Important)


3. Power on the Camera, When you hear "Please use the APP for Wi-Fi configuration "Click"+" to add device. (If you do not hear the prompt, please double-press the power button consecutively).

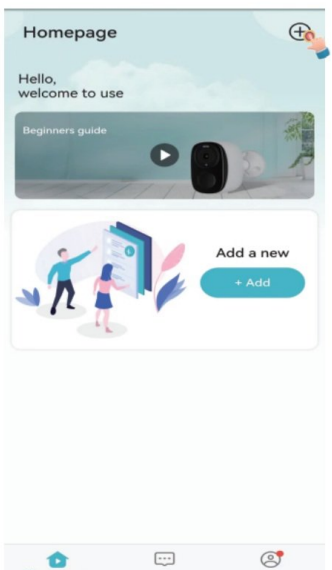


4. BT will find the device nearby. Please click “Connect”.

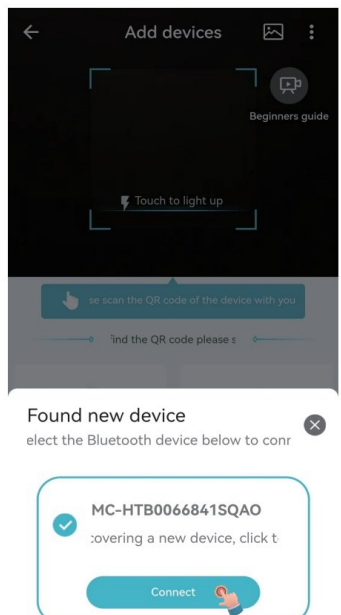


5. Select Wi-Fi, enter the correct password, and click "Next."

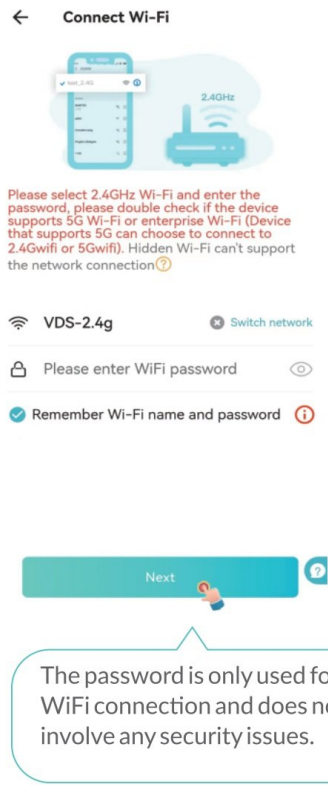


6. You will hear "Connecting the Wi-Fi please wait" and "the Wi-Fi connect succeeded".

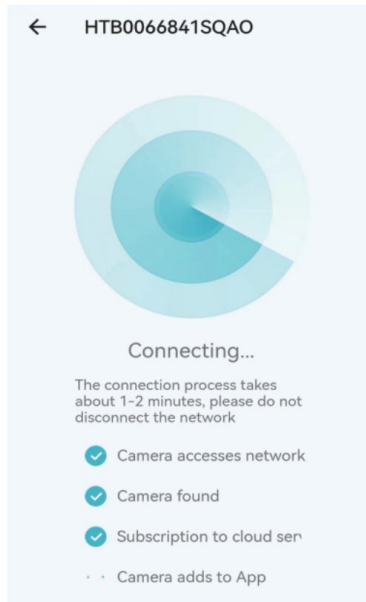


7. You can customize the device name. and click “Get started”.

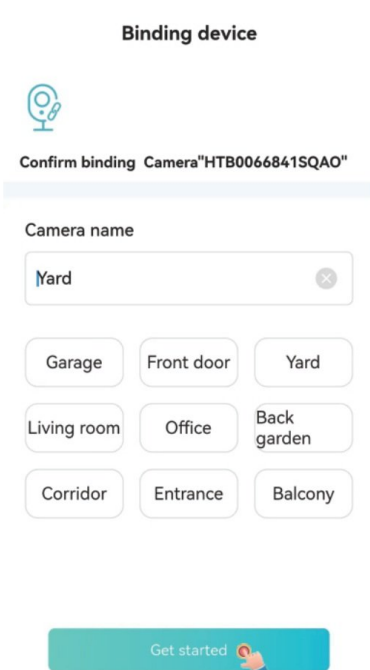


8. Congratulations! Your device has been added successfully.

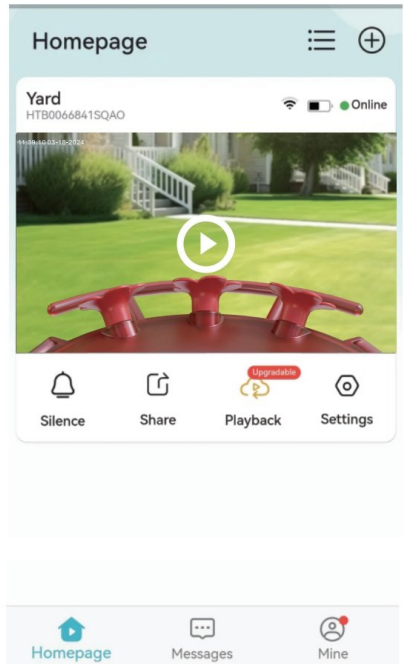


Device Sharing

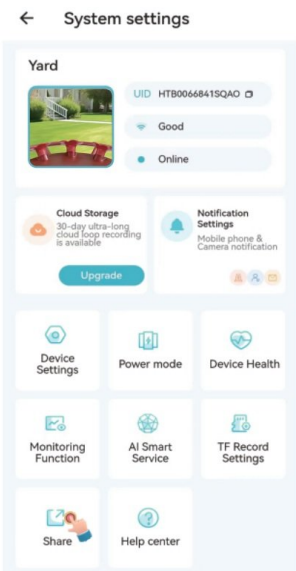

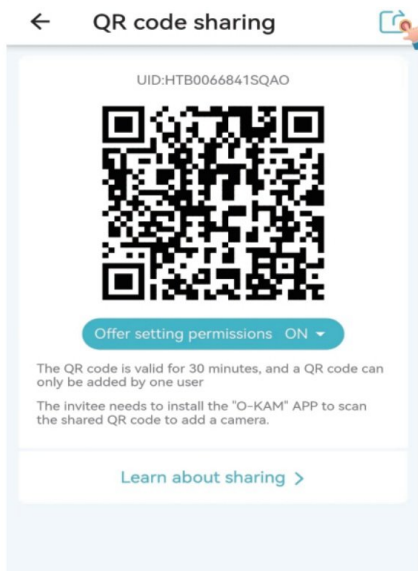


Please click “Settings" to enter system settings, choose “share" to share device, there will be a QR code. Please note you can on or off setting permission, If select “On” to allow others to manage the device. Select “Off” to allow view-only access.

Fill the Nectar

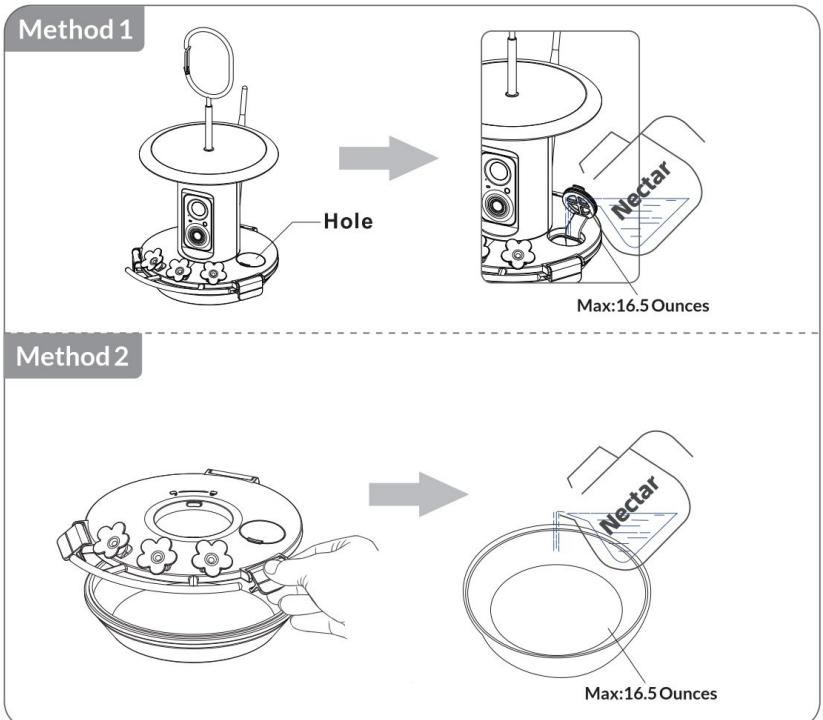

Step 1: After opening the stopper, align it with the exposed hole and slowly pour the nectar into it. Alternatively, you can directly unfasten the buckle to open the entire upper cover and pour the nectar in directly.

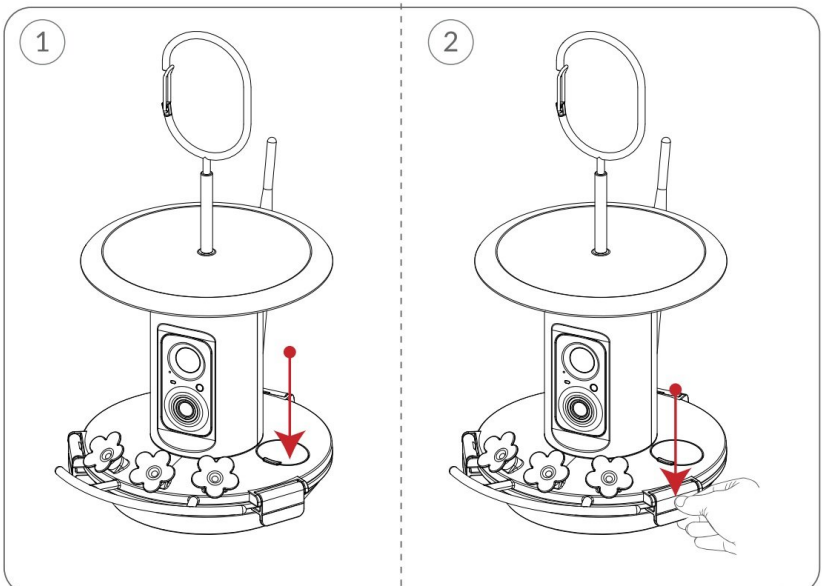

Step 1: To prevent the nectar from spilling, insert the stopper into the hole and press it firmly by hand.

Step 2: If you have opened the upper cover, align the cover with the container and fasten the buckles securely.

Read Before Installation

1. Keep Bird Feeder and all accessories out of reach of children and pets.

2. Make sure the camera has been fully charged (DC5V / 1.5A).

3.Working temperature: -10°C to 50°C(14°F to 122°F)Working relative humidity: 0-95%

4. Please do not expose the camera lens to direct sunlight.

5.The camera is rated IP65 and can operate in rain.It must not be submerged in water.


Note:

1. Bird Feeder Cam works with 2.4GHz and 5GHz Wi-Fi.


2. Strong lights may interfere with the device's ability to scan QR code.

3. Avoid placing the device behind furniture or near microwaves products. Ensure the device is within strong Wi-Fi signal range.


4.Please check the signal of the camera again before installing it on the shelf to ensure that the signal is good enough.Avoid removing the camera after installation due to weak signal.You can check the Wi-Fi signal strength in the app under Settings. (Wi-Fi signal strength updates when the device wakes up from sleep.Before mounting the bird feeder, place it in the selected location and wake up the device several times to check signal strength and ensure stable connection and smooth video streaming.)




Assemble the Hummingbird Feeder

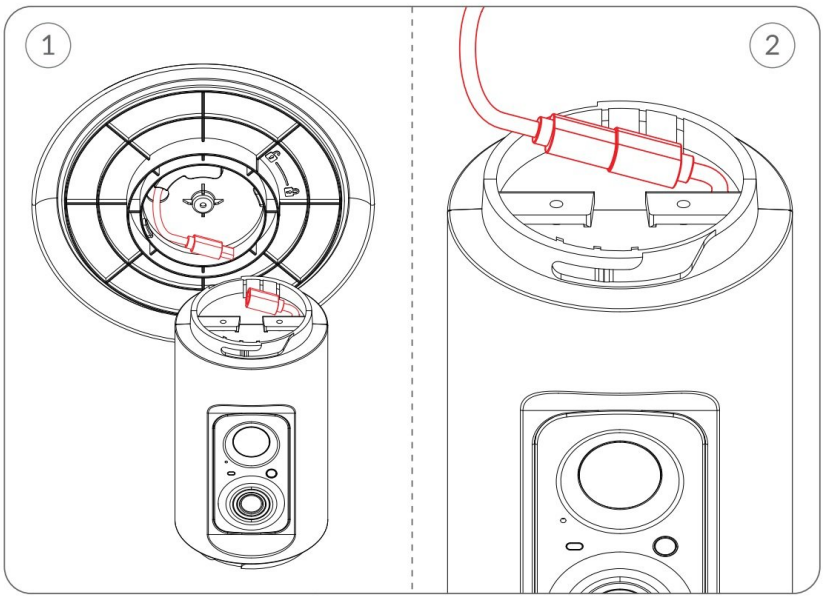


Step1: As shown, insert the Type-C connector.

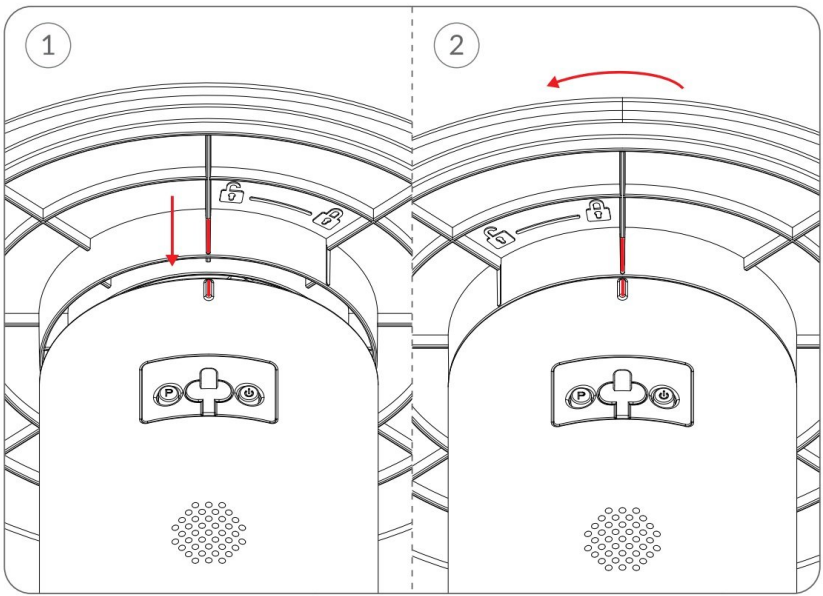


Step2: Align the main body mark to the cover's unlock symbol, press down, and rotate clockwise until it aligns with the lock symbol.

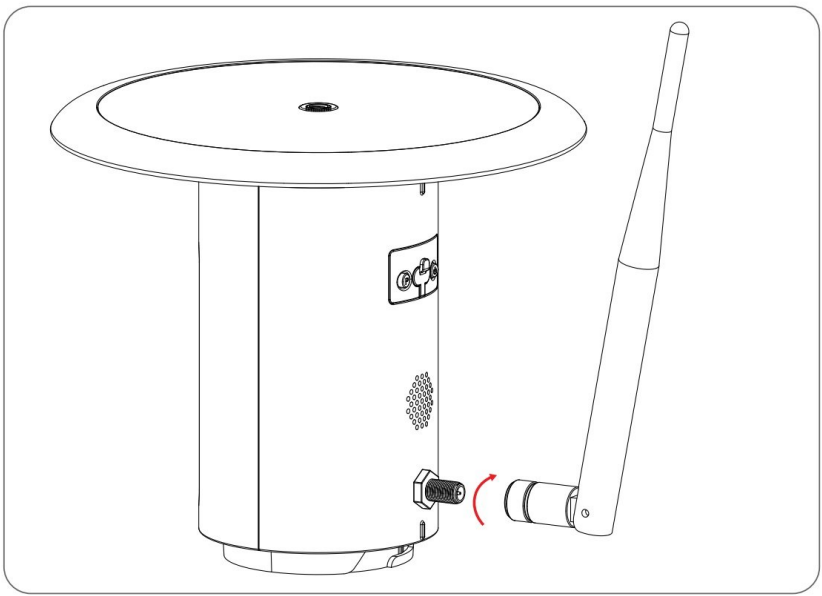


Step3: Align the antenna connector and tighten the nut clockwise.

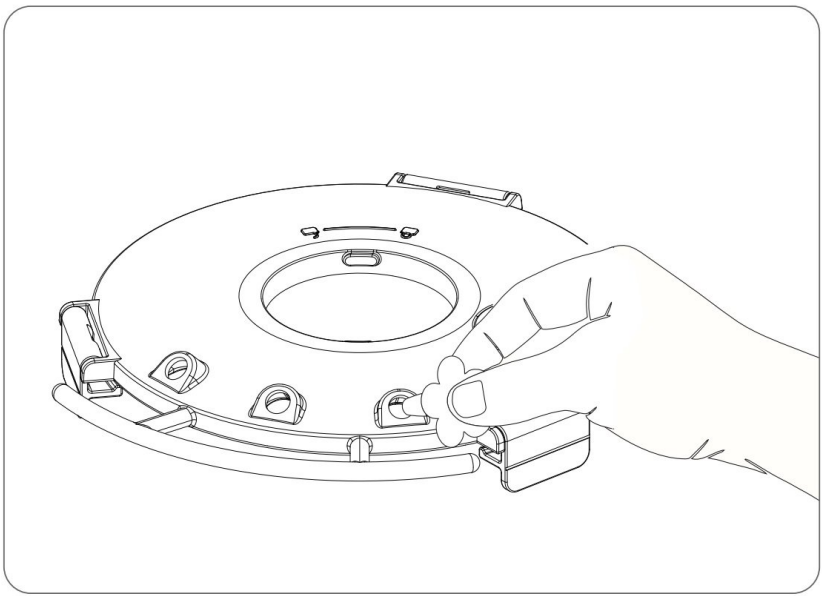


Step4: Flower Accessory:Align it with the hole on the base cover, insert it and press firmly to secure.

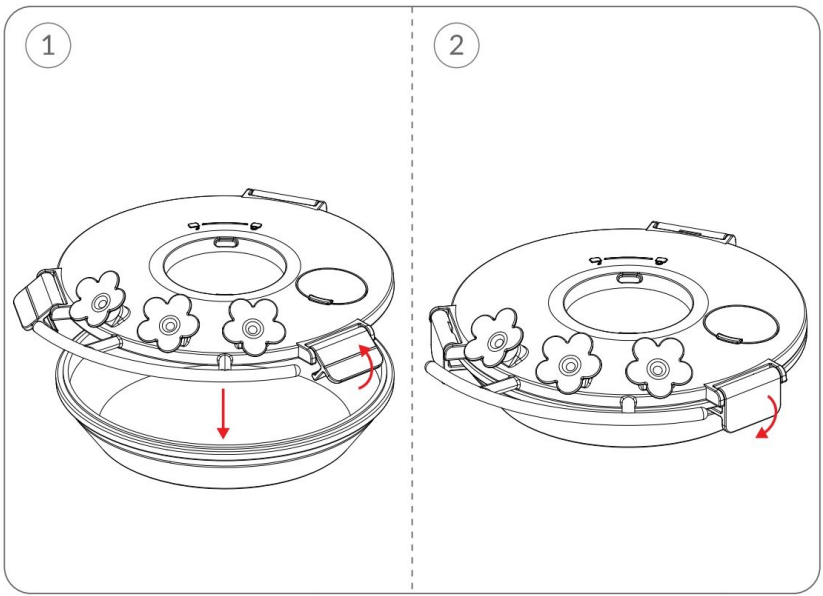

Step5: Seat the sealing ring in the cover groove. Align the container lid to its base, press firmly, and rotate the latch to secure.

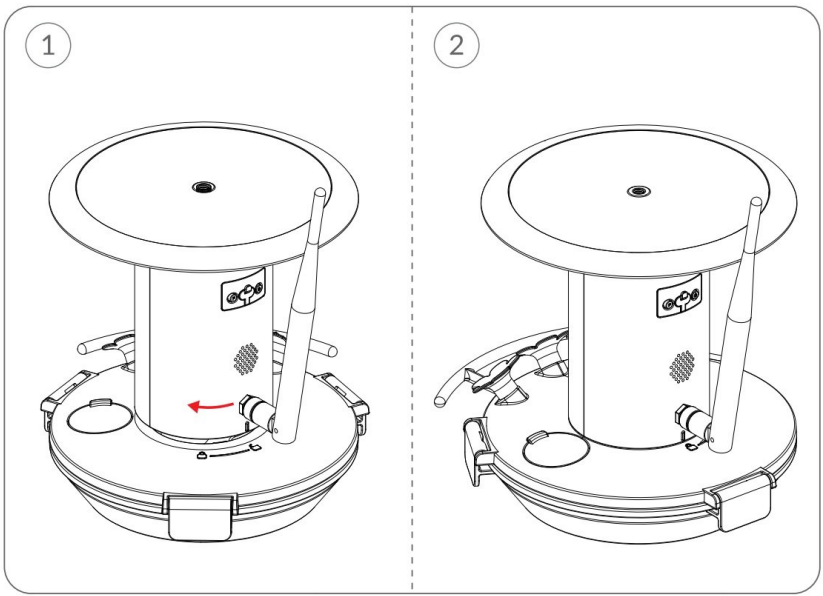


Step6: Align the main body bottom mark to the container lid's unlock symbol, press down, and rotate clockwise to secure.

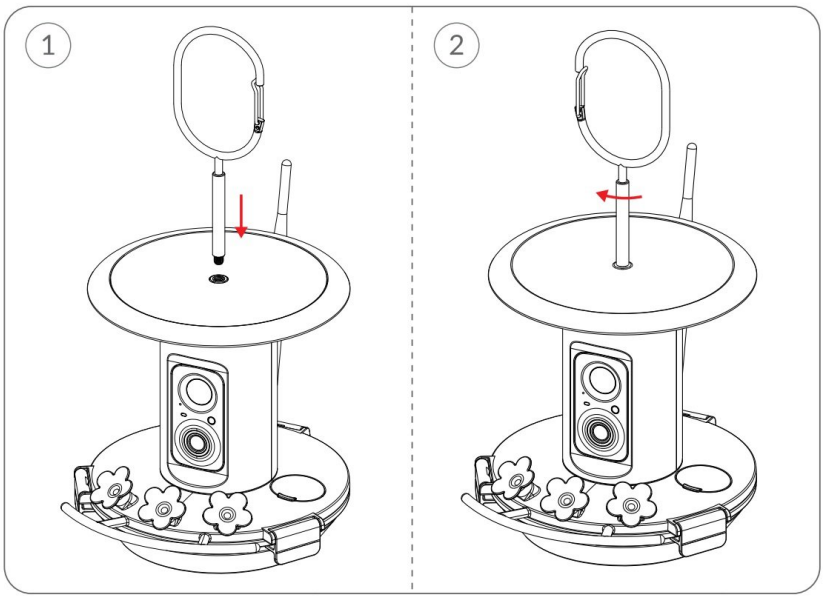


Step7: Align the hook screw with the nut on the top cover and rotate clockwise to tighten. Assembly is complete.

Special Reminder

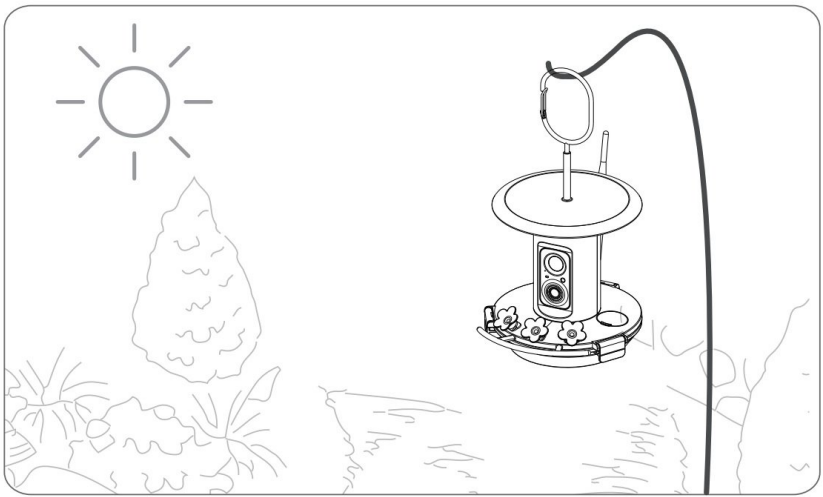

Optimal Setup Location Tips
1.Hang the feeder on a pole, in a tree, or shrub in an open space, near flowers, and sunlight.
2.Position the feeder at least 15–20 ft away from windows and 10–15 ft within the nearest cover (shrub, tree) to ensure the hummingbirds feel safe.
3.Ensure the camera is facing your property only.
4.Ideally, position the feeder facing North or in another direction for better lighting throughout the day.
5.Keep the feeder away from ant/wasp/bee nests. A little vegetable oil on the hanger can help keep ants away.

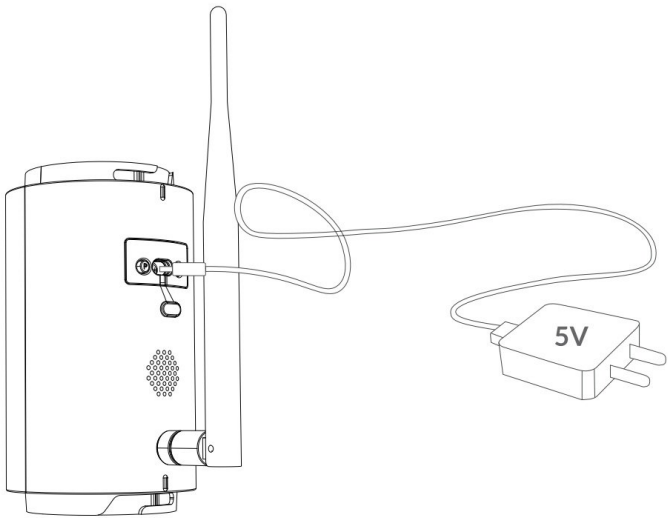


Charge the camera with adaptor (5V) if not enough power.

Clean the Hummingbird Feeder


Step 1: Unscrew the upper cover counterclockwise until it reaches the unlock mark, and then the upper cover can be removed.

Step 2: Unscrew the base counterclockwise until it reaches the unlock mark, and then the base can be removed.

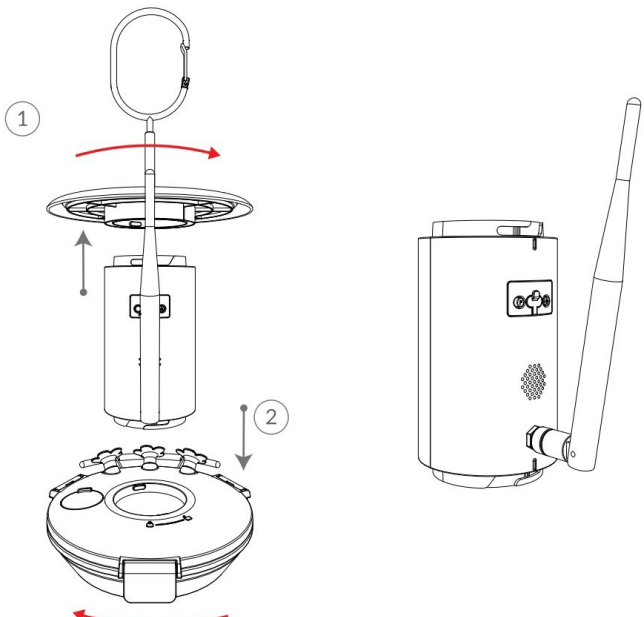


Note:

Make sure you remove the camera before cleaning to avoid damaging it.
Please avoid touching the lens to prevent blurry camera images.

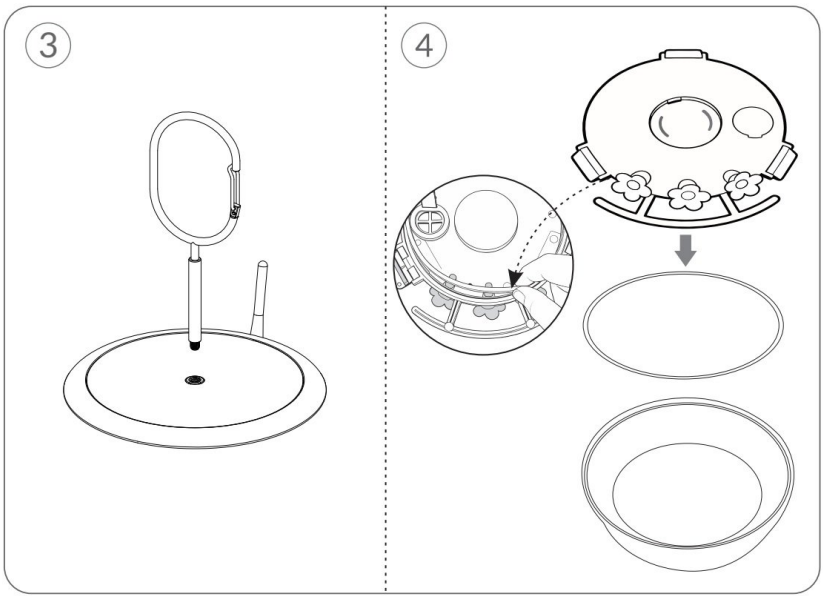

Step3: Unscrew the hook from the upper cover by turning it counterclockwise

Step4: Open the buckle to remove the cover, and take off the silicone pad attached to the cover (please perform this operation over a sink).

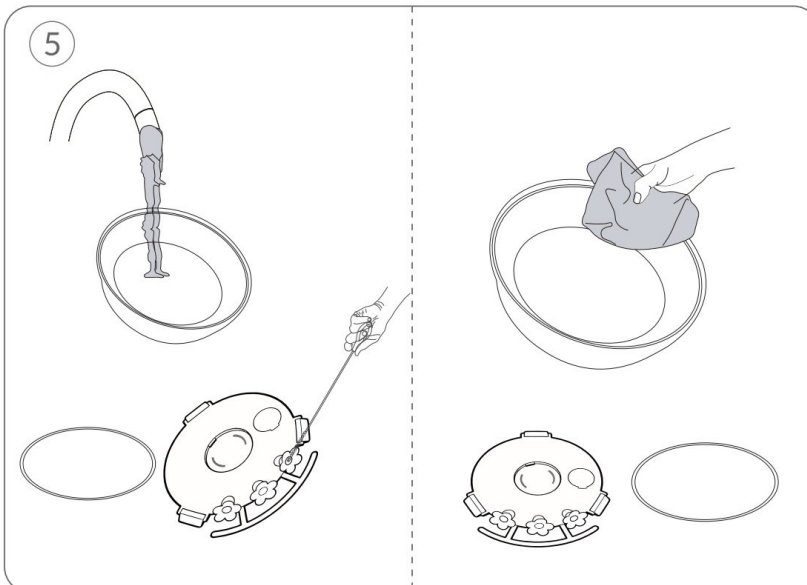

Step5: Rinse the container and silicone pad thoroughly with clean water, and you may use the provided brush to clean the components. Dry all parts of the feeder completely.

Frequently Asked Questions

Q1: Why doesn't the Wi-Fi name appear when I connect to Wi-Fi?
A1: You need to turn on the "location permission" for the app in the system settings and change it to "allow when using".

Q2: Will the camera show red lights when night vision is activated?
A2: The built-in infrared lamp beads make the camera only show some dim red lights when night vision is activated, but the image quality is still clear under no light environment.

Q3: What are the requirements for Wi-Fi?
A3: Please use a 2.4GHz or 5GHz wireless network. Meanwhile, please set the Wi-Fi authentication method to WPA2-PSK or other lower level of the security method. A password is required. The password is only used for WiFi connection and does not involve any security issues.

Q4: How far should the camera be placed from the router?
A4: After testing, the Wi-Fi connection distance can normally reach up to 50 meters in the open area. However, the actual situation depends on the strength of Wi-Fi and its surrounding environment.

Q5: What is the maximum length of recording time?
A5: You can choose the recording time in the app. The camera record for a fixed time or "auto" mode, when depending on whether there is a person, the maximum length of a video is 30 seconds.

Q6: WhatshouldIdo when the deviceis malfunctioning?
A6: If the device encounters issues during operation, first press the P button for 1–3 seconds, The device will restart. If it was previously connected successfully, it will reconnect automatically. If the problem persists, double-press the power button to restore factory settings and enter ready-to-connect mode,Then follow the setup instructions to reconnect the device（If the device was previously connected, delete it from the app before reconnecting）.

Q7: The device cannot connect to the app. What should I check?
A7: Please review the steps below. Most connection issues are related to Wi-Fi environment or setup conditions and can usually be resolved quickly.

1) Complete Setup Indoors First
Start the setup process indoors near your main router. This ensures a strong signal and successful initial connection.
After the device is connected in the app, you can install it outdoors within a strong Wi-Fi signal area.You can check the Wi-Fi signal strength in the app under Settings.(Wi-Fi signal strength updates when the device wakes up from sleep.Before mounting the bird feeder, place it in the selected location and wake up the device several times to check signal strength and ensure stable connection and smooth video streaming.)

2) Antenna Installation
Make sure the antenna is securely attached before starting setup.

3) Location Permission (Required for BT Mode Setup)
Ensure Location Services are enabled on your phone and permission is granted to the O-KAM app.
Location access is required by iOS/Android for BT device discovery during setup.

4) Wi-Fi Network Status
Make sure your Wi-Fi network is working properly and has internet access.
Do not use a Guest network during setup, as it may block communication between the device and your router.
Temporarily disable mobile data on your phone to ensure it remains connected to the selected Wi-Fi network during setup.

5) 2.4 GHz vs 5 GHz Wi-Fi
The device supports both 2.4 GHz and 5 GHz Wi-Fi.
For outdoor installation, 2.4 GHz generally provides more stable coverage due to longer range and better wall penetration.
Most modern dual-band routers combine 2.4 GHz and 5 GHz under one Wi-Fi name. No special router settings are required for setup.
If setup does not succeed, simply move the device closer to the main router before trying again.
5 GHz offers faster speeds but shorter range, which may affect outdoor performance.

6) Wi-Fi Name and Password
Confirm that you entered the correct Wi-Fi name (SSID) and password.
Passwords are case-sensitive.Avoid extra spaces when copying or typing the password.Avoid special characters in the Wi-Fi name or password if possible.

7) Router Security Settings
The device supports WPA2 and WPA3 security modes.
If your router is set to WPA3-only mode and connection fails, switch to WPA2/WPA3 mixed mode and try again.

8）Reconnecting the Same Device
If reconnecting the same device, delete it from the app before attempting setup again:Settings Device Settings Delete Device

9）Restore Factory Settings (If the Issue Persists)
Make sure the device is turned on.Double-press the Power button to restore factory settings.The device will restart and enter setup mode.Then follow the setup instructions in this manual to reconnect.

10) Recommended Device Usage
For optimal account management and full functionality, we recommend using a smartphone as your primary device.
Tablets can be used for viewing by logging in with a separate account and enabling device sharing.

11) One Active Login per Account
For optimal performance, avoid logging into the same account on two phones at the same time.
If switching phones, log out from the first device before logging into the second.

How to Clean the Lens?

1.Brush off debris: Gently remove any dust or sand with a soft, lint-free cloth.

2.Wipe with microfiber: Use a clean eyeglass or microfiber cloth that's free of oils or residue.

3.Skip rough materials: Paper towels, napkins, or sponges can scratch or leave lint.

4.Avoid harsh cleaners: Steer clear of window sprays, alcohol, or strong chemicals—they can leave residue.